



Supreme Series


Casement D-1

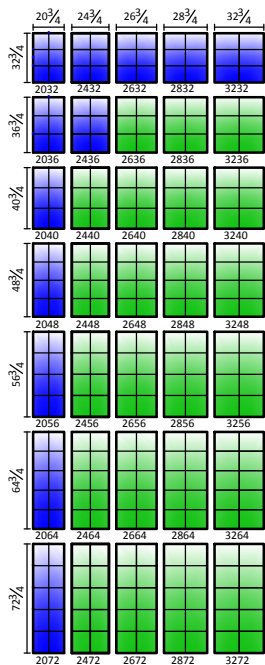


Casement D-2

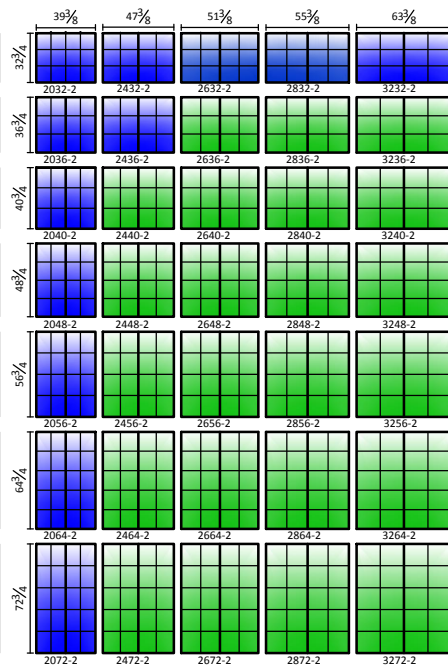


Casement D-3

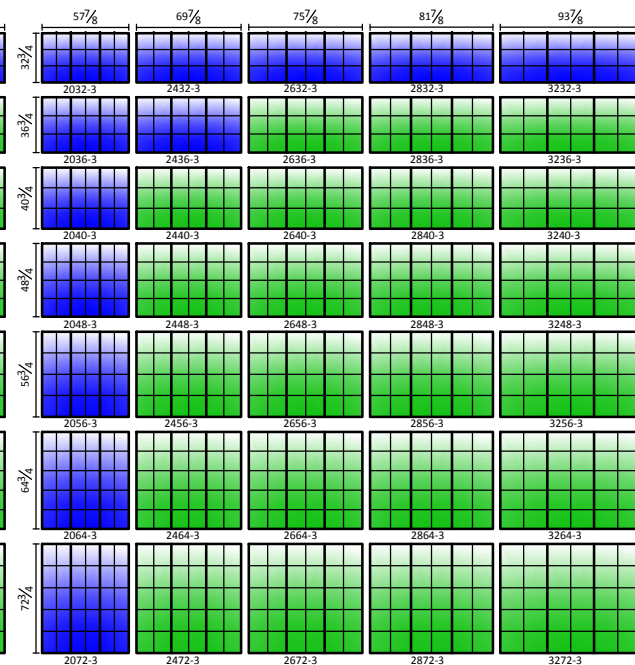


Double Glider

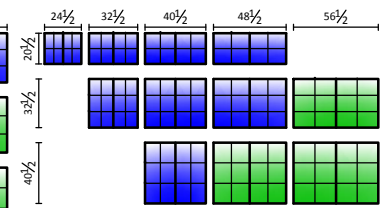


Single Glider

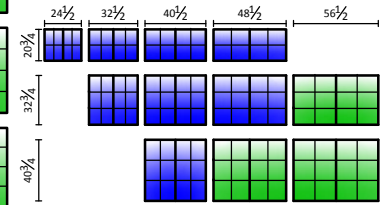


Casement D-4

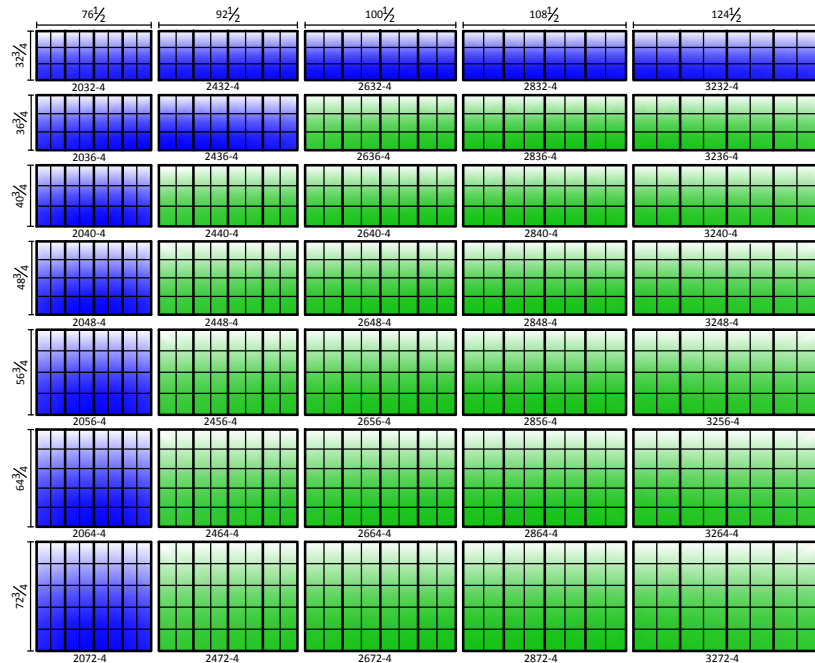


Single & Double Hung D-1

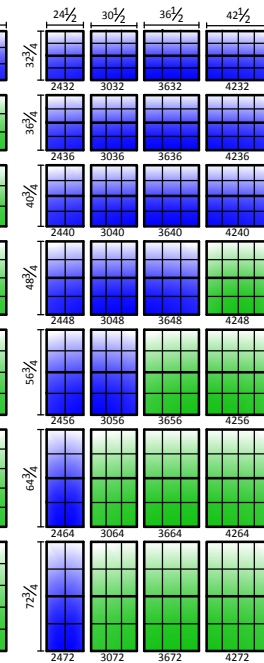

Single & Double Hung D-2

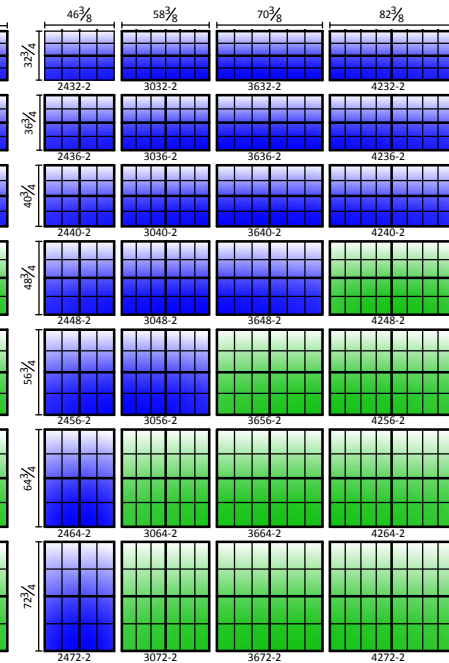

Tilt & Turn

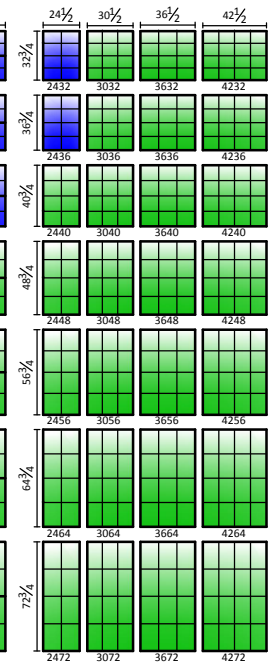


Green windows meet Egress and blue windows do not meet Egress.

All window dimensions are rough stud opening (RSO). For frame size, subtract $1\frac{1}{4}$ "


Scale $\frac{3}{32}$ " = 1'-0"

Select Series


Casement D-1

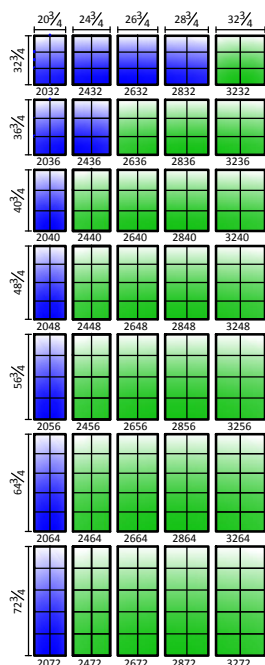


Casement D-2

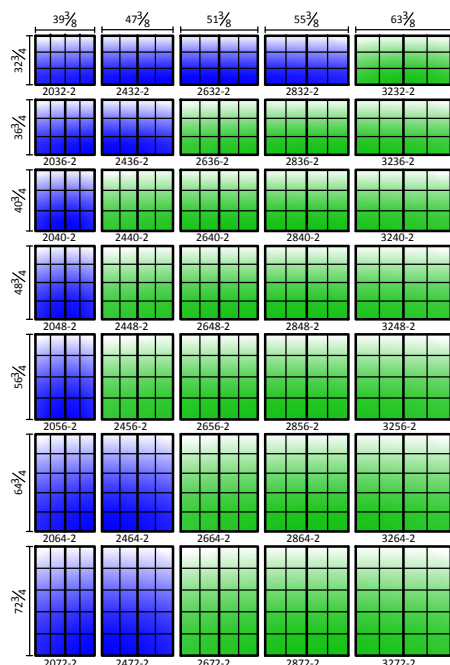


Casement D-3

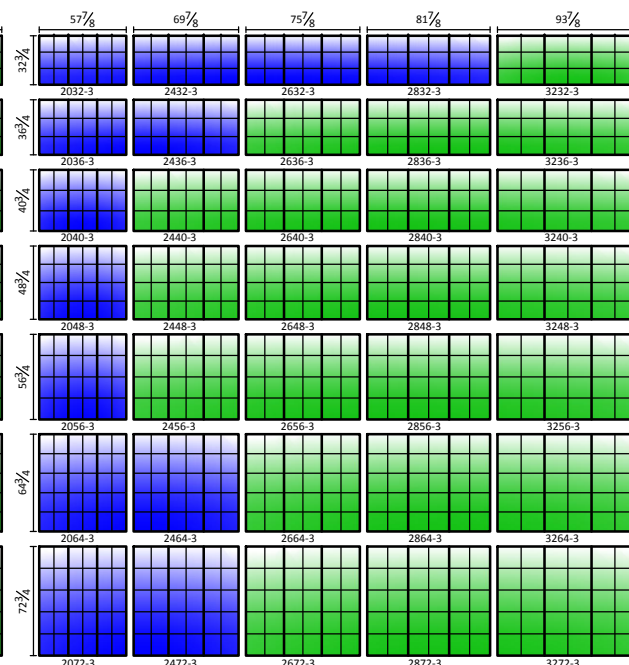


Single Glider

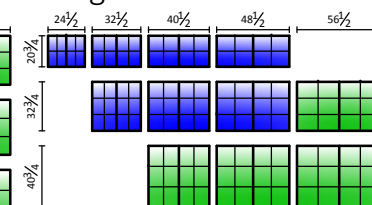


Casement D-4

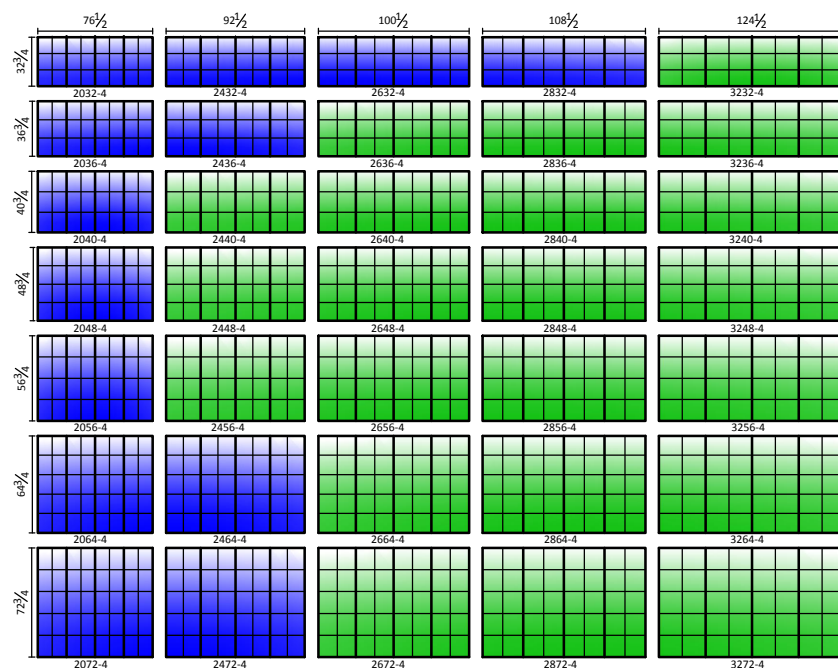

Single & Double Hung D-1

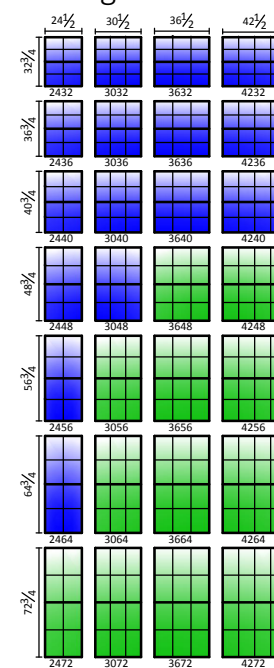

Single & Double Hung D-2

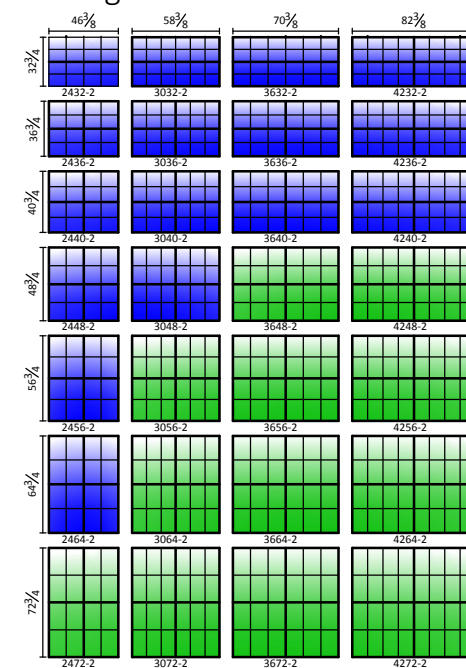


Green windows meet Egress and blue windows do not meet Egress.

All window dimensions are rough stud opening (RSO). For frame size, subtract 1 1/4"


Scale 3/32" = 1'-0"

Heritage & Estate Series


Casement D-1

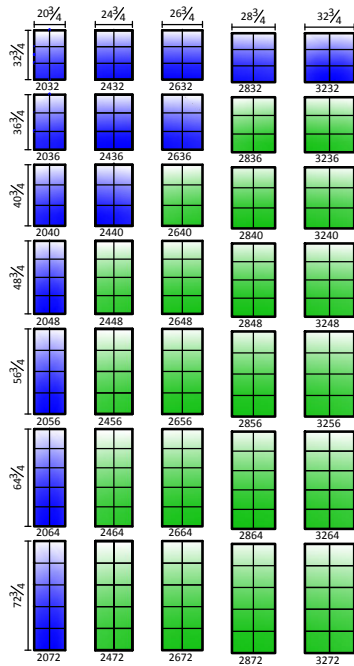


Casement D-2

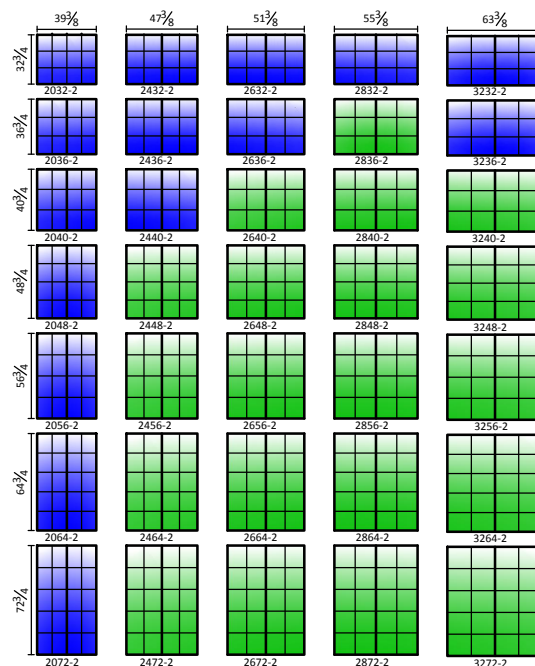


Casement D-3

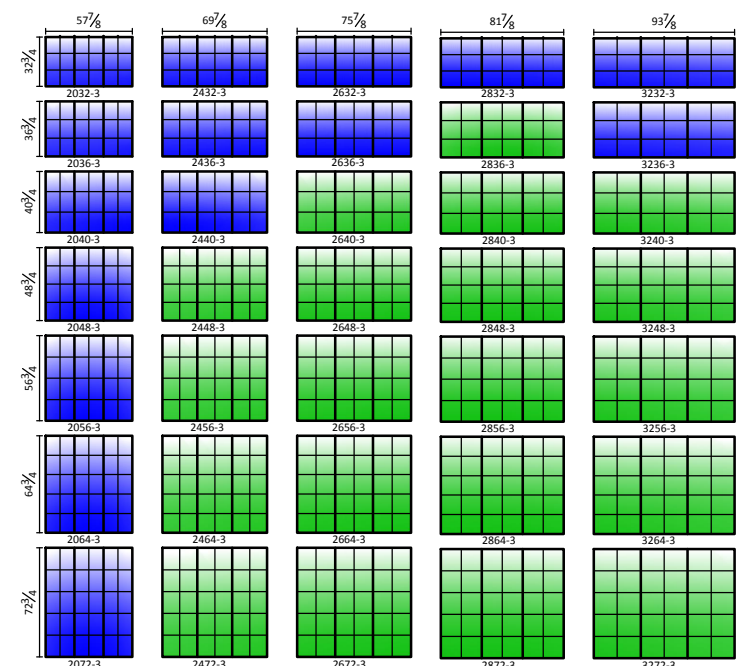


Casement D-4

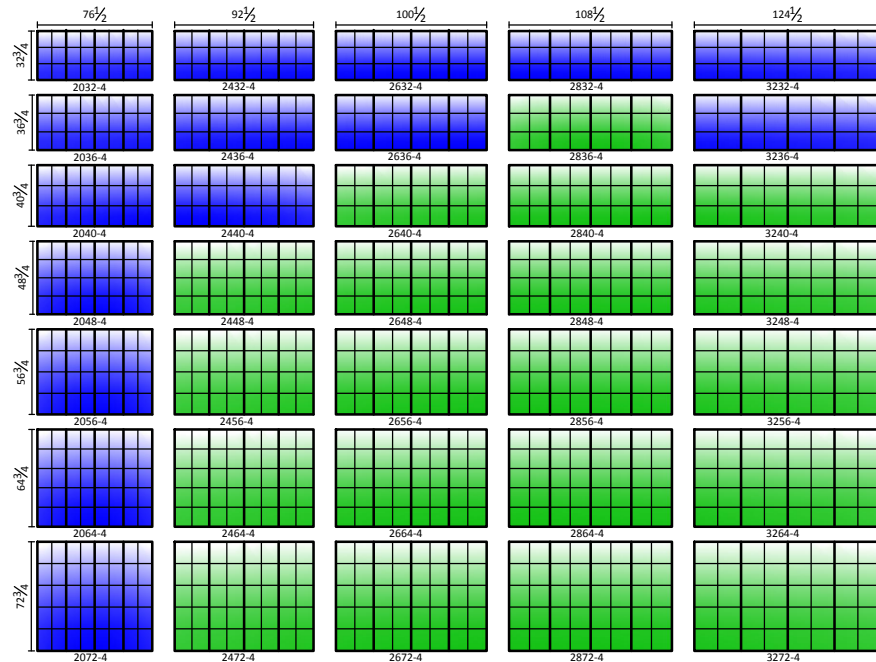

Double Hung D-1

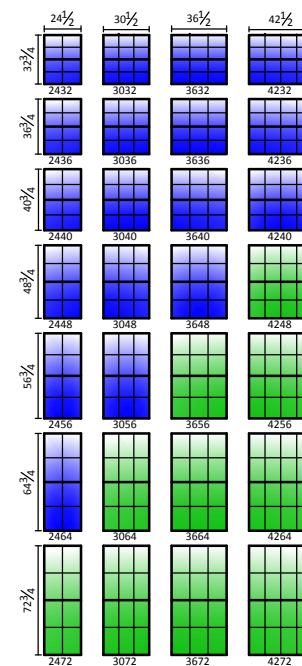

Double Hung D-2

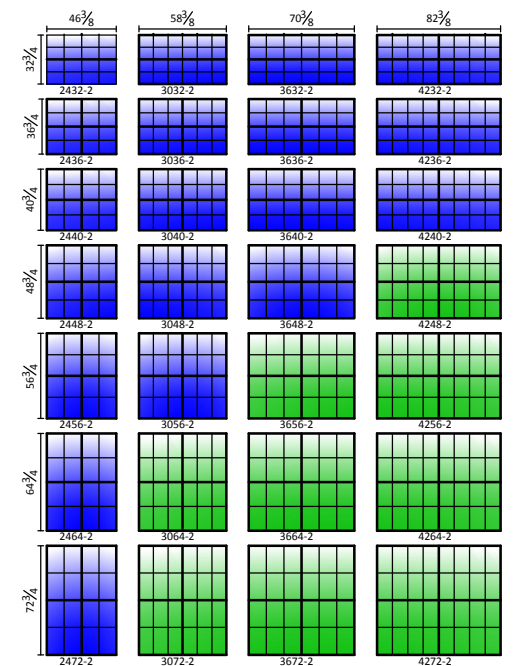

Green windows meet Egress and blue windows do not meet Egress.

All window dimensions are rough stud opening (RSO). For frame size, subtract 1 1/4"

Scale 3/32" = 1'-0"